
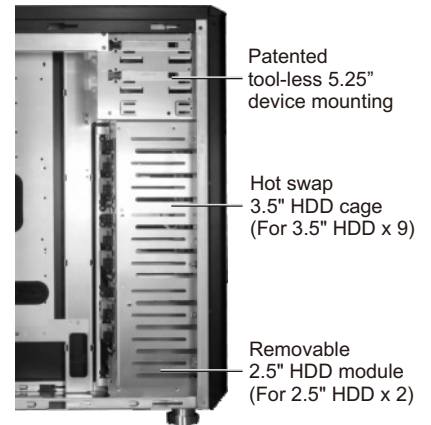
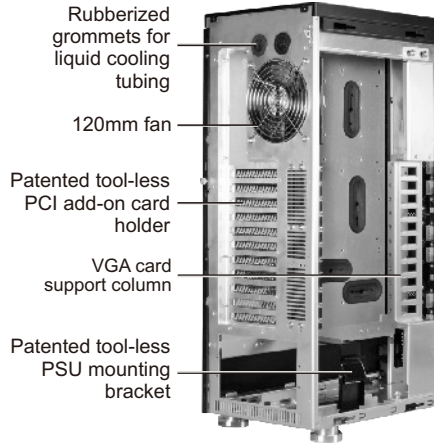


Installation Guide

Case components

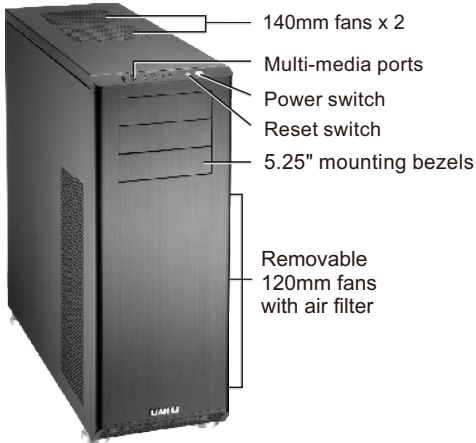


Hardware list

* Extra quantities are spare parts.

Buzzer (1)	Longer thumb screw (3) for motherboard mount	Thumb screw(36) for HDD	PCI card holder/B (4)
USB 3.0 to USB 2.0 converter	Shorter thumb screw (9) for motherboard mount	Rubber slide rail (18) for HDD	PCI card holder/A (8)
Bracket (1) for power supply mounting	Screw driver (1) to ass'y motherboard	Cable ties (2)	Thumb screw (8) for PCI card holder
Screw (4) for PSU mounting	Stand off bolt (3) for motherboard (spare parts)	Nut (3) for stand off	Box (1) for spare parts
Screw (20) for 2.5" HDD/spare parts	Mounting bracket for SSI CEB/EEB M/B		

Key is in the accessories box

Guide to open left and right side panels

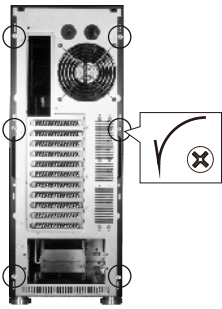


Remove six thumb screws.




Slide the panel backward to release.


Motherboard installation

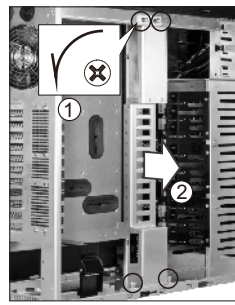

Remove four thumb screws, to release the VGA card support column

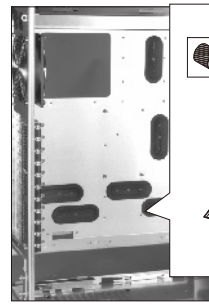

Place the M/B on the copper bolt and secure with thumb screws.

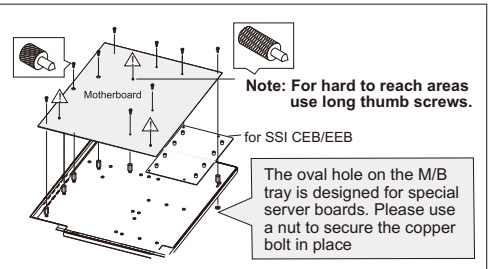


Remove front panel



Pull the front panel towards yourself.

ODD installation

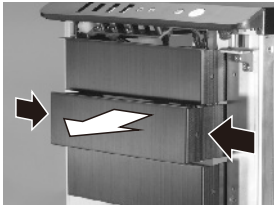

Press the right and left sides of the bezel to remove.



Press the plastic handle to release the mounting bracket.




Push the ODD into the 5.25" rack.




Close the bracket to secure the ODD.


3.5" HDD module installation

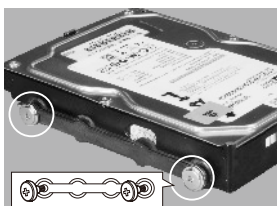


Install the screws to the HDD with anti-vibration rubber rings.

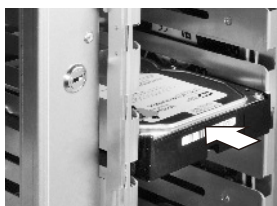


Slide the HDD into the HDD cage.

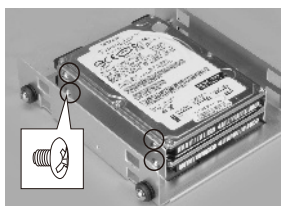

Fasten eight screws.

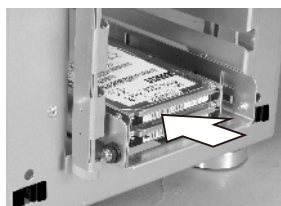


Slide the HDD into the HDD cage.

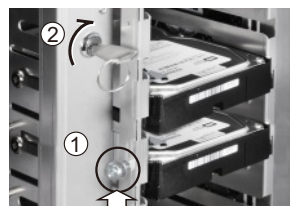


1.Close the gate to secure the HDD.
2.Lock.

2.5" HDD module installation

PSU installation

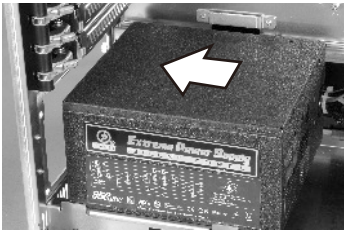


Place the PSU on the stand, and push against the rear panel.

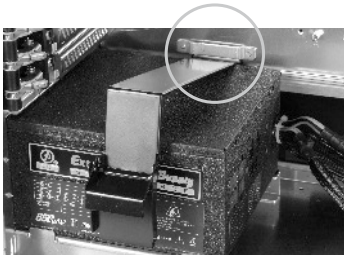

Place the PSU bracket into the slot as shown.




Lock the PSU bracket to secure the PSU.

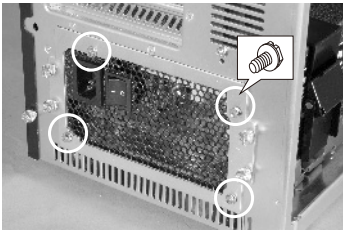


* For transportation, please use screws to secure the PSU.

VGA card pillar installation guide

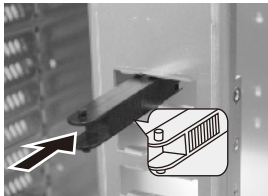


Insert PCI card holder/A

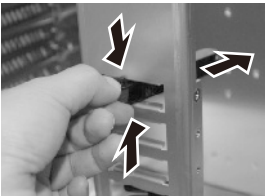

Use PCI card holder/B for thick VGA cards.



Use PCI card holder/B for thick VGA cards.

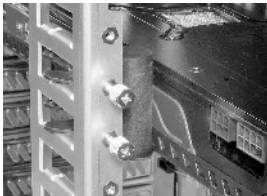


Use PCI card holder/B for thick VGA cards.


Cable management



PCI add-on card installation

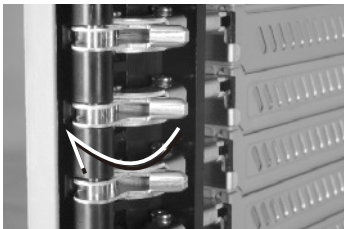


Open the aluminum latch to remove the PCI slot bracket.

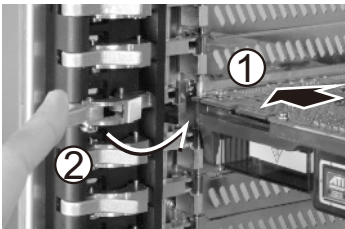


Push the card into the PCI slot, close the aluminum latch to secure the card.

Remove air filter

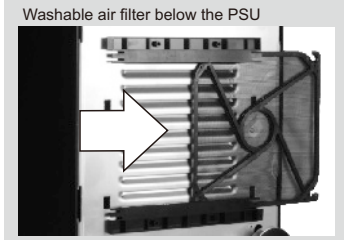


Slide the air filter to remove.

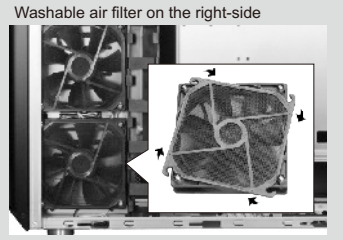


Rotate washable air filter clockwise to remove.


Change fan from right-side to left-side

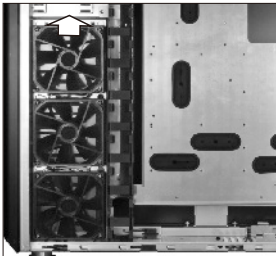


Slide the fan up to remove.

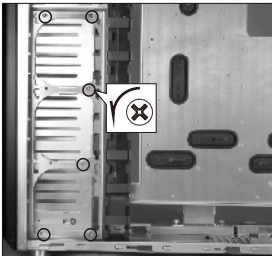

Remove six screws to release the bracket.

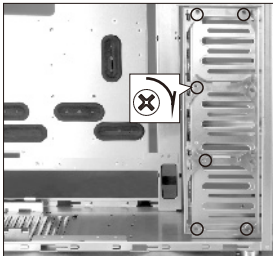


Place the bracket on the other side, fasten six screws to secure.


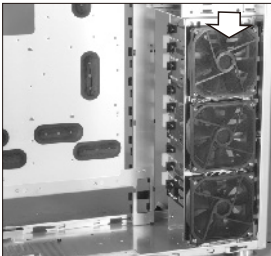


Place the fan into the bracket and slide down to secure.



Supports liquid cooling systems

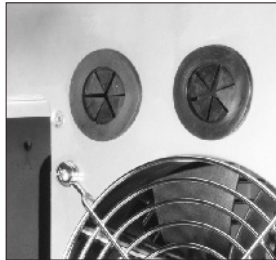


I/O port installation

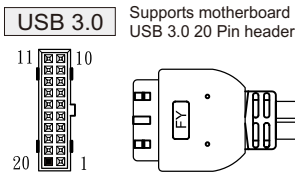



USB 2.0



E-SATA



USB 3.0 to USB 2.0 converter

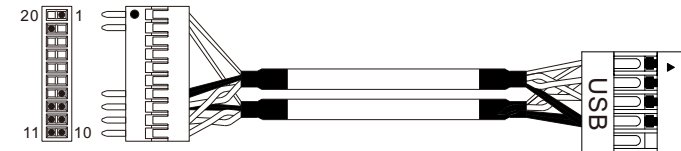

Cable installation guide

